

# Cleaning and Maintenance

# Tarasafe

## Surface Protection

These products have deeply inlaid mineral crystal particles in the wearlayer acting as a slip resistant agent. They should not be sealed under any circumstances, unless the slip resistance is considered not important.

## Initial Maintenance

- Remove loose dirt and debris from the newly installed floor using broom or vacuum.
- Ensure all adhesive residues are removed with due regard to supplier's recommendations.
- Do not use high abrasive pads or scourers.  
Wash floor with a neutral detergent by low speed scrubbing machine fitted with a blue, green or brown pad according to the dirt level on the floor.
- Ensure all detergent residues are rinsed and removed from the floor.

## Daily Maintenance

Remove loose dirt with broom or vacuum; damp mop with neutral detergent.

## Period Maintenance

Machine autoscrub with nylon brush at high speed as required, or wash floor with a spray detergent and buff with blue or red pad at 450rpm.

international  
flooring solutions

p 03 366 9839 e office@robertmalcom.co.nz  
59 Halwyn Drive, PO Box 914, Christchurch 8140, New Zealand  
robertmalcom.co.nz



robert malcolm

