

Cleaning and Maintenance

Tarasafe

Surface Protection

These products have deeply inlaid mineral crystal particles in the wearlayer acting as a slip resistant agent. They should not be sealed under any circumstances, unless the slip resistance is considered not important.

Initial Maintenance

- Remove loose dirt and debris from the newly installed floor using broom or vacuum.
- Ensure all adhesive residues are removed with due regard to supplier's recommendations.
- Do not use high abrasive pads or scourers.
Wash floor with a neutral detergent by low speed scrubbing machine fitted with a blue, green or brown pad according to the dirt level on the floor.
- Ensure all detergent residues are rinsed and removed from the floor.

Daily Maintenance

Remove loose dirt with broom or vacuum; damp mop with neutral detergent.

Period Maintenance

Machine autoscrub with nylon brush at high speed as required, or wash floor with a spray detergent and buff with blue or red pad at 450rpm.

international
flooring solutions

p 03 366 9839 e office@robertmalcolm.co.nz
59 Halwyn Drive, PO Box 914, Christchurch 8140, New Zealand
robertmalcolm.co.nz


robert malcolm

